


# SOHODESK SD03

ASSEMBLY INSTRUCTIONS - PLEASE KEEP FOR FUTURE REFERENCE

HOME OFFICE FURNITURE

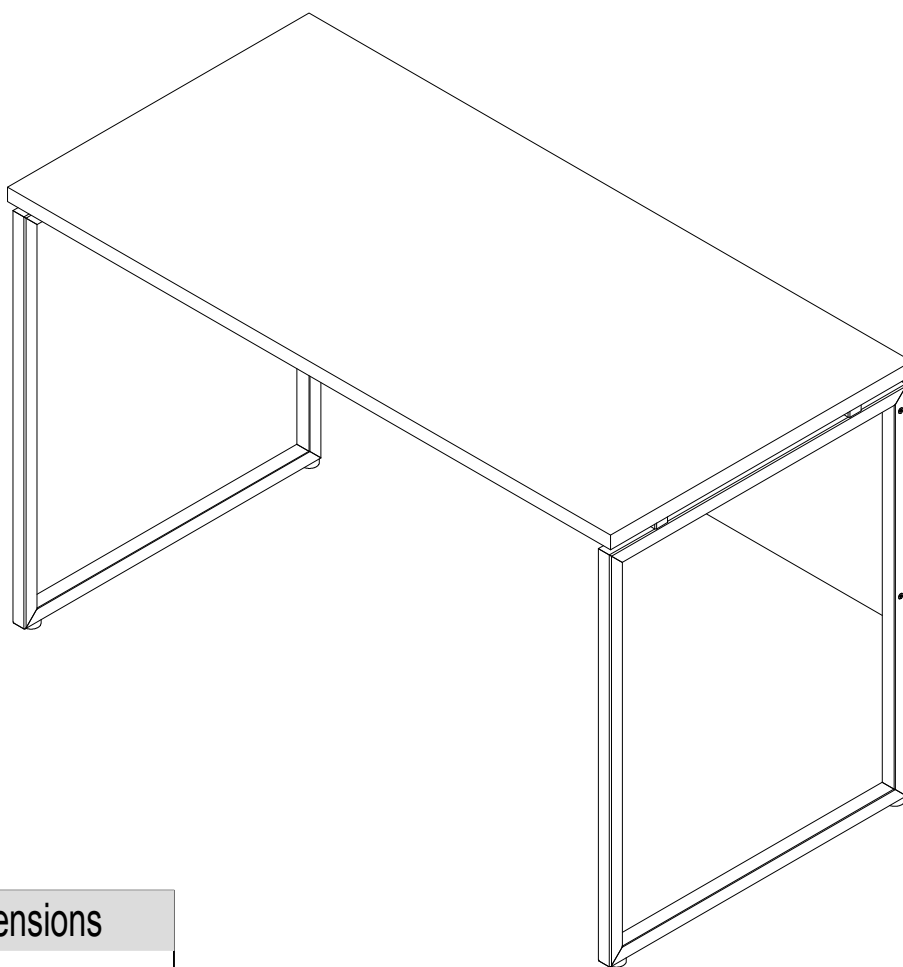

## Dimensions

Length - 120cm

Depth - 60cm

Height - 76cm

Weight - 19,80kg

Maximum Weight Tolerance  
50kg

IMPORTANT - PLEASE READ THE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY

# SAFETY AND CARE ADVICE

## Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use the allen key provided, or a hand screwdriver.
- Dispose of all packaging carefully and responsibly.



## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- Do not stand on the unit.
- Do not use this unit as a step ladder.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

# COMPONENTS - FIXINGS

PLEASE CHECK YOU HAVE ALL THE PARTS LISTED BELOW


Note : the quantities below are the correct amount to complete the assembly.  
In some cases more fittings may be supplied than are required.

A

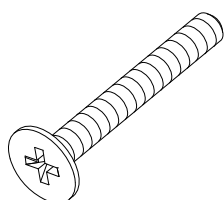

Size M6 x 50 Bolt  
x 8

B



Height Adjustable Foot x 4  
( Size M6 x 25 mm )

C



Puller Nut 10 x 13  
x 4

D




Nut Sticker  
x 4


## Tools required



Phillips screwdriver

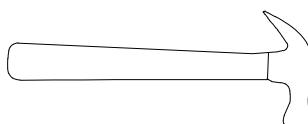


Small hammer




Tape measure

# COMPONENTS - PARTS


PLEASE CHECK YOU HAVE ALL THE PARTS LISTED BELOW

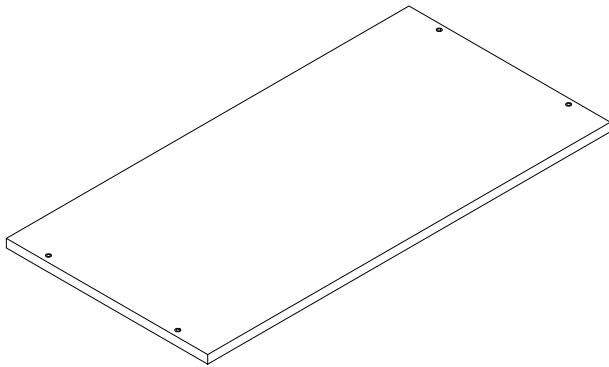

**1** Desktop

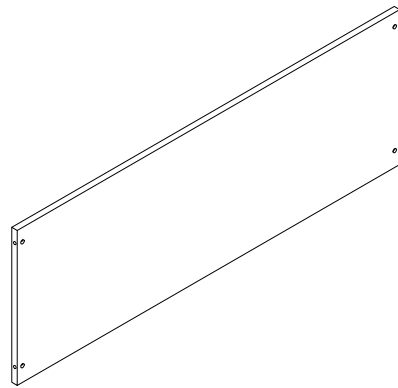

**2** Modesty Panel

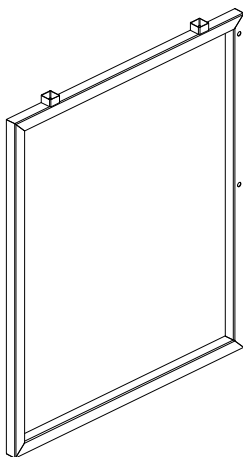


**3** Legs x 2

## Step 1

# ASSEMBLY INSTRUCTIONS


Carefully screw in adjustable feet **(B)** into the leg frames **[3]**.

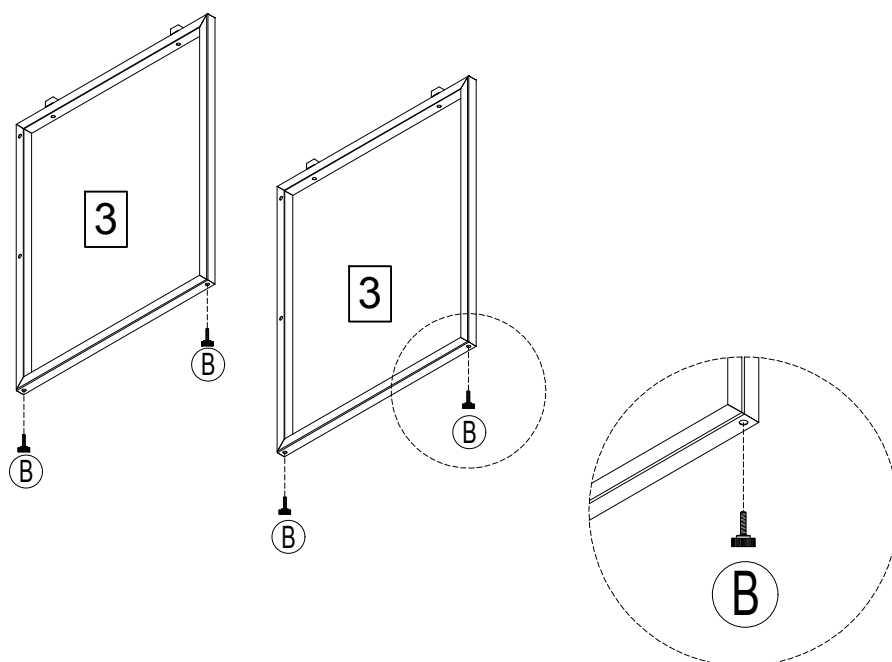

## Step 2

Align the modesty panel holes **[2]** with the leg frames **[3]** as shown in the assembly instruction image.

Once aligned use the M6 x 50mm Bolt **(A)** to fix the modesty panel and legs together, making sure all bolts are tight and no gapping is visible.

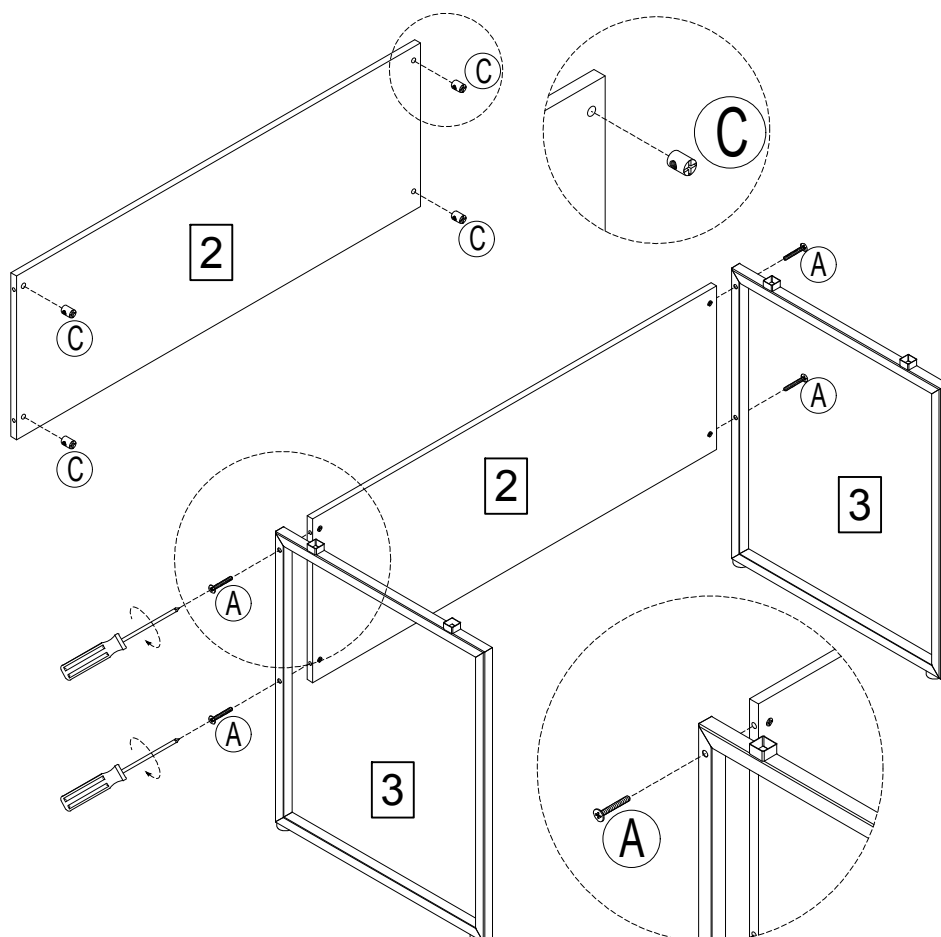

### Step 3

## ASSEMBLY INSTRUCTIONS

Align the leg frames **3** with the pre-drilled and inserted holes in the desktop **1**.

Once all 4 x holes are aligned, use the M6 x 50mm Bolts (A) to fix the leg and wooden desktop 1 together.

Please make sure all bolts are tight and no gapping is visible between the legs and desktop.

